


# How To Cast Your Vote With *MicroVote Infinity*

**1.** The Election Official inserts the blue **VOTE CARD**, and selects the Ballot Style for the Voter.

**2.** Push the button next to the candidate of your choice. An "X" will appear in the box next to the candidate's name. If you wish to change your choice again, and it will cancel your selection. You may then continue voting.

**3.** To vote for All Candidates of one party (A *Straight Ticket*), press the button next to the Party of your choice.

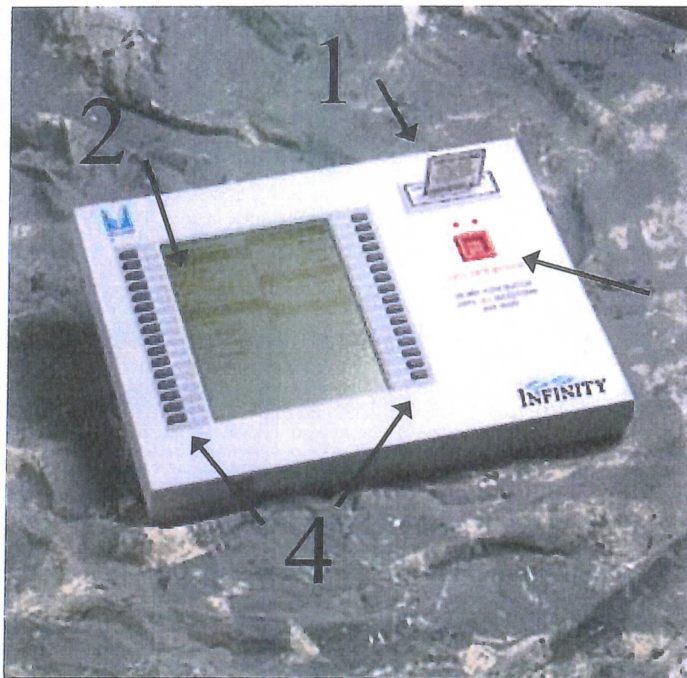

**4.** Press NEXT PAGE to Advance the ballot and PREVIOUS PAGE to go back to Review your ballot. These are the bottom Left and Right buttons.

**NOTE:** You must view all pages of the ballot and select **CONFIRM VOTE** before being able to press the **Cast Vote** button.

**NOTICE: A STRAIGHT PARTY VOTE WILL NOT CAST VOTES FOR:**

**PUBLIC QUESTIONS, TOWNSHIP BOARDS, SCHOOL BOARDS OR JUDICIAL RETENTIONS.**

**A VOTER MUST VOTE THESE OFFICES IN ADDITION TO THE STRAIGHT PARTY.**



**MicroVote** Corporation  
Electronic Voting Systems  
6366 Guilford Avenue  
Indianapolis, IN 46220-1750

**5.** If you wish to cast a *Write-In* Vote, press the *Write-In* button in the office you are voting for. The *Write-In* screen will appear. Push the buttons next to the desired letters to spell the candidate's name. This name will appear on the center of the screen. Press the 'Done' button at the bottom left to Accept, or 'Erase' at the bottom right to return to the ballot.

**6.** When your selections are final, move to the **CONFIRM VOTE** page at the end of the ballot. You must select the **CONFIRM VOTE** option before the *Cast Vote Button* will be lit. Press the *Cast Vote Button* and it will notify you that your vote has been successfully recorded